

Direct Code Entry

1. Press and hold the **CODE SEARCH** button until the red indicator stays on, then release the **CODE SEARCH** button.
2. Press and release the desired Mode button (**TV, VCR, etc.**). The red indicator blinks, then stays lit.
3. Enter the 4 digit code from the code tables. Note: after a valid code entry, the red indicator turns off. For an invalid code, the red indicator flashes.
4. With your device on, press **CHANNEL UP**. If the device responds, no further programming is required. Note: If some buttons do not operate your device, try one of the other codes for your brand.

Code Search (by Brand)

Lets you search for a code for a specific Brand within the Code Library for a particular manufacturer.

1. Turn on the device (**TV, VCR, etc.**) to be controlled.
2. Press and hold the **CODE SEARCH** button until the red indicator remains on, then release the **CODE SEARCH** button.
3. Press and release the desired Mode button (**TV, VCR, etc.**). The red indicator blinks off once.
4. Press and release the numeric button (**0-9**) corresponding to desired Manufacturer (see table below). Note, pressing "**0**" performs a full library search same as Device Library Code Search Method.
5. Press the **CHANNEL UP** button ((or **POWER** or **PLAY** (VCR only)) repeatedly until the device to be controlled changes channel.
6. Press and release **MUTE** to install the code.

Note, when all codes under a Brand have been searched the red indicator flashes rapidly for 3 seconds.

Code Search (by Device)

If after trying "Direct Code Entry" or "Code Search (by Brand)" your device does not respond, or if your brand is not listed, try doing a device search of the code library for your code by following the steps below.

1. Manually turn on the device (**TV, VCR, etc.**) to be controlled.
2. Press and hold the **CODE SEARCH** button until the red indicator stays on, then release the **CODE SEARCH** button.
3. Press and release the desired Mode button (**TV, VCR, etc.**). The red indicator blinks, then stays lit.
4. Press the **CHANNEL UP** button repeatedly (up to 300 times) until the device to be controlled changes channel. The red indicator blinks, then stays lit.
5. Press and release **MUTE** to install the code.

Most users will want to store VCR codes under the **VCR** button, Cable codes under **Cable**, etc. If you want to store a VCR code under **Cable**, etc., first follow the procedure for Direct Code Entry and press **Cable** in step 2 of Direct Code Entry, then enter ANY VCR code in step 3 of Direct Code Entry. Then follow the steps above for Brand Search or Complete Search.

Brand Search Table

Look up your brand in the appropriate column (**TV, VCR, etc.**) in the table below. Look for the digit (1, 2, 3, etc.) that applies to your brand, and enter it in step 4 of "Code Search (by Brand)."

Digit	TV	VCR/DVD/DVR	CABLE	SAT/DBS	CD/AUDIO
1	RCA, GE, Proscan	RCA, GE, Proscan	Scientific Atlanta	RCA, GE, Proscan, Pioneer	RCA, GE, Proscan
2	Zenith	Zenith, Apex	Jerrold	Zenith, Gemini	Zenith
3	Philips, Magnavox	Marantz, Philips, Magnavox	Tocom, General Instrument.	Philips, Magnavox	Marantz, Philips, Magnavox
4	Sony, Panasonic, Sharp, Toshiba, Daewoo	Sony, Panasonic, Sharp, Toshiba, Daewoo, Yamaha, Denon	RCA, GE, Proscan, Pioneer	Sony, Panasonic, Sharp, Toshiba,	Sony, Panasonic, Technics, Sharp, Toshiba
5	Hitachi, Sanyo, LG-Goldstar, Samsung, JVC, Mitsubishi	Hitachi, Sanyo, LG-Goldstar, Samsung, JVC, Mitsubishi	Zenith, Gemini	Hitachi, JVC, Samsung	Hitachi, Sanyo, JVC, LG-Goldstar, Samsung, Mitsubishi
6	Sylvania, Fisher, Curtis-Mathes, Emerson	Sylvania, Fisher, Curtis-Mathes, Emerson	Philips, Magnavox	General Instrument, Echostar, Dish, Hughes, Primestar	Sylvania, Fisher, Curtis-Mathes, Emerson, Optimus
7	N/A	N/A	N/A	N/A	Pioneer, Teac, Nad
8	N/A	N/A	N/A	N/A	Kenwood, Yamaha, Denon, Onkyo
9	N/A	N/A	N/A	N/A	N/A
0	ALL	ALL	ALL	ALL	ALL

TV including LCD, Plasma, & Panel TVs

ABEX	0120	DAYTRON	0002 0502	KAYPANI	0119	ORION	0713 0115 0105
ADMIRAL	0603 0224 0701	DELL	0522 0404 0814	KEC	0805	PANASONIC	0718 0416 0007
ADVENT	0219 0893	DIAMOND VISION	0622 0496 0810	KENWOOD	0002 0502	0618 0807 0039 0739
ADVENTURA	0019	DIGISTAR	1503 0118	KLH	0023	0345 0696 0901 0608
AIKO	0407	0413 0213 0318	KLOSS NOVABEAM	0408 0019	PHILCO	0807 0002 0102 0502
AIWA	0121 0221 0324 0528	DIMENSIA	0704 0601	KONKA	0906 0702 0203 0306	0919 0408 0109 0715 0901 0402
ALLERON	0706	DISNEY	0417	0208 0911 0842 0942 0504	PHILIPS	0807 0022 0020 0422
AMARK	0603	DUKANE	0507 0808	KTV	0906 0003 0703 0805 0608	0122 0222 0322 0002 0520
AMTRON	0906	DUMONT	0713 0002	KURAZAI	0701	0919 0521 0621 0430 0247 0901
AKAI	0112 0801 0309 0027	DURABRAND	0520 0115 0317	LASONIC	0622 0496	0402 0408 0109 0210 0310 0715
ANAM NATIONAL	0906 0901	0916 0027 0447 0323	LG	0002 0606 0502 0102 0324	PHILIPS-MAGNAVOX	0807 0022
.....	0104 0805 0920	DYNASTY	0805	0435 0802 0307 0609 0217	0322 0919 0224 0430
AOC	0002 0102 0502	ELEKTRA	0701	LIQUIDVIDEO	0319 0418 0793	PILOT	0002
.....	0003 0217 0119 0320	ELECTROBAND	0801 0003	LODGENET	0704 0821 0601 0701	PIONEER	0120 0719 0808
APEX	0023 0223 0123 0741	ELECTROHOME	0002 0502	LOEWE	0722 0807	0002 0502 0610 0519
ARCHER	0603	0027 0901 0803	LOGIK	0704 0601 0701	PIVA	1109
ASPECT	0507	ELITE VIDEO	0321	LUCE	0107	POLAROID	0819 0918 0914
AUDIOVOX	0906	EMERSON	0002 0502 0006 0115	LUXMAN	0002 0502	PORTLAND	0002 0102 0502
AXION	0319 0793	0506 0706 0520 0906 0316	LXI	0704 0002 0502 0506 0807	0407 0415 0614
BANG & OLUFSEN	0620	0505 0614 0324 0924 0626	0312 0512 0601 0324 0103	PRECISION	0218
BELCOR	0002	0826 0027 0327 0128 0228	MAGNASONIC	0706	PRICE CLUB	0112
BELL & HOWELL	0704 0506	0632 0134 0247 0605 0705 0805	MAGNAVOX	0807 0002 0502	PRIMA	1503 0118 0213 0318
.....	0601 0701	0703 0903 0004 0519 0106 0104	0247 0919 0224 0430	PRINCETON GRAPHICS	0603 0511
BENQ	0709 0909 0711	0304 0604 0804 0005 0105 0305	0402 0408 0109 0715	PRISM	0007
BRADFORD	0906	ENVISION	0002 0502 0009	MAJESTIC	0704 0601 0701	PROSCAN	0704 0312 0103
BROKSONIC	0316 0115 0626	FISHER	0506 0612 0428 0619 0802	MARANTZ	0807 0719 0002 0502	0601 0817 0917
.....	0327 0632 0041	FUJITSU	0321 0706	MEDION	0922 0421 0417	PROTON	0820 0002 0502
BROKWOOD	0002	FUNAI	0706 0520 0906	MEGATRON	0002 0502 0507	0910 0119 0220
CANDLE	0002 0502 0019 0402	0324 0247 0805	MEI	0003	PROVIEW	1104 1204
CAPEHART	0119	FUTURETEC	0906 0805	MEMOREX	0002 0502 0506 0706	PULSAR	0713 0002
CELERA	0023	GATEWAY	0206	0115 0704 0601 0428 0632 0701	QUASAR	0718 0416 0007 0618
CELEBRITY	0801	GE	0704 0312 0018 0002 0502	MGA	0002 0102 0502 0706	0807 0039 0739 0901 0608
CENTRIOS	0518	0006 0007 0601 0835 0901	0802 0803 0715 0619	RADIO SHACK	0704 0002 0406
CENTURION	0502	0114 0103 0803 0806 0310	MIDLAND	0704 0713	0506 0906 0618 0502 0324
CETRONIC	0805	GIBRALTER	0713 0002	0007 0312 0103	0835 0601 0802 0705 0805 0111
CHANGHONG	0023 0741	GOLDSTAR	0002 0502 0102 0324	MINUTZ	0806	RCA	0704 0002 0406 0007 0011
CITIZEN	0002 0502 0906 0112 0512	0435 0802 0307 0609 0217	0502 0027 0803 0715 0619	0611 0811 0312 0514 0720
.....	0520 0115 0701 0402 0805 0407	GRUNDY	0706 0906	MONIVISION	0205	0102 0502 0601 0817 0917
CLAIRTONE	0003	GUESTVISION	0721	MONTGOMERY WARD	0704	0835 0901 0103 0803 0211
CLASSIC	0023 0741 0805	HAIER	0709 0223 0323 0317	0701 0601	0912 0114 0519 0320 0420
CLP	0008	HALLMARK	0002 0502	MOTEGA	0506	REALISTIC	0704 0002 0406 0506
CLP CLASSIC	0020 0002 0006	HARVARD	0906	MOTOROLA	0603 0901	0906 0618 0502 0601
COLOR VOICE	0602	HITACHI	0410 0507 0815 0607	0002 0102 0502	0324 0802 0705 0805 0111
COLORTYME	0002 0502 0602	0808 0002 0502 0710 0701 0802	MTC	0112 0512 0003	RHAPSODY	0003
CONCERTO	0002 0502	HISENSE	0707 0315 0515 0715 0519 0324	MULTITECH	0906	RUNCO	0713 0719 0712
CONCIERGE	0713	ILO	0908 0819 0223	MULTIVISION	0010	SAMPO	0014 0206 0002
CONTEC	0906 0802 0003 0805	IMA	0906	MYRON & DAVIS	0822	0502 0119 0802
CORNEA	0606	INFINITY	0807 0430	NAD	0002 0502 0512 0120	SAMSUNG	0112 0309 0209 0512
CRAIG	0906 0805	INITIAL	1608	NEC	0719 0002 0102 0502	0302 0502 0002 0102
CROSLEY	0807	INSIGNIA	0911 0520 0323 0115	0901 0602 0111 0715	0110 0818 0895 0437
CROWN	0906 0805	0914 0213 0318 0247 0504	NETTV	0206 0014	0802 0103 0609 0012 0212
CURTIS MATHES	0704 0112 0614	INTEGRA	0719	NEXXTECH	1806 0318	SAMSUX	0502
.....	0002 0502 0601 0506	INTEQ	0713	NIKEI	0805	SAMTRON	0112
.....	0512 0437 0701 0103	JANEIL	0019	NIKKO	0002 0502 0407	SANSUI	0115 0632
CIX	0603	JBL	0807	NORCENT	0223 0905 0207	SANTECA	0021
CXC	0906 0805	JCB	0801	NTC	0407	SANYO	0506 0311 0612 0002
DAEWOO	0614 0002 0502 0611	JC PENNEY	0704 0002 0102 0502	OLEVIA	1304	0428 0802 0412 0619
.....	0102 0415 0905 0615 0505	0112 0312 0512 0007 0601 0310	ONCOMMAND	0721	SCOTCH	0002 0502 0706
.....	0826 0529 0046 0609 0805 0407	0402 0802 0103 0803 0604 0806	ONKING	0805	0906 0004 0105 0805
.....	0303 0602 0214 0403 0314 0503	JENSEN	0002 0502 0914	ONWA	0906 0805	SEARS	0704 0807 0506 0706
		JVC	0607 0204 0321 0508 0326	OPTIMUS	0618 0120 0039 0739	0112 0002 0502 0312 0512
		0993 0802 0108 0308 0715	OPTOMA	1404	0612 0520 0601 0812 0509
		KAWASHO	0002 0502 0801	OPTONICA	0603 0111	0041 0247 0802 0103 0619

SELECTRON 1803 1603 1703
 SHARP 0509 0913 0907 0603 0002
 0502 0224 0228 0202 0111 0813
 SHOGUN 0002
 SIGNATURE 0704 0601 0701 0903
 SIMPSON 0402
 SONIC 0003
 SONY 0414 0902 0801 0708 0639
 SOUNDESIGN 0002 0502 0706
 0906 0402 0805
 SPECTRAVISION 0921
 SQUAREVIEW 0520
 SSS 0002 0906 0805
 STARLITE 0906
 STAR SIGHT 0008
 SUPRA 0002 0809
 SUPERSCAN 0812 0509 0247
 SUPERSONIC 0096
 SUPREMACY 0019
 SUPREME 0801
 SVA 0223
 SYLVANIA 0807 0002 0502
 0115 0520 0919 0324 0247
 0402 0408 0109 0715 0717
 SYMPHONIC 0906 0520
 0324 0247 0004
 SYNTAX 1304
 TANDY 0603
 TATUNG 0709 0421 0901
 TECHNICS 0007
 TECHWOOD 0002 0502 0007
 TEKNIKA 0704 0002 0102 0502
 0706 0906 0112 0512 0618 0601
 0019 0701 0402 0802 0805 0407
 TELECAPTION 0313
 TELERENT 0704 0601 0701
 TERA 0002 0220
 TEVION 0421
 TMK 0002 0502
 TOSHIBA 0517 0419 0512 0613
 0719 0112 0506 0111
 0618 0627 0437 0041
 0094 0802 0111 0313 0715
 TRUTECH 1504
 UNIVERSAL 0806 0310
 VICTOR 0607
 VIDTECH 0002 0102 0502
 VIEWSONIC 0206 0808
 VIKING 0019
 VIZIO 0709
 WARDS ... 0704 0807 0002 0102 0502
 0706 0601 0408 0109 0310
 0111 0513 0806 0701 0402 0004
 WESTINGHOUSE 0915 0013
 WHITE WESTINGHOUSE 0611
 0614 0415 0215 0324 0529 0609
YAMAHA 0618 0002 0102 0502
 ZENITH .. 0713 0502 0606 0409 0710
 0415 0507 0714 0405 0712 0015
 0916 0008 0002 0115 0224 0324
 0126 0326 0826 0228 0430 0632
 0435 0437 0903 0407 0505 0701

HDTV Set Top Boxes

GO VIDEO HDT100 0662
 HITACHI 61HDX98B 0864
 HUGHES HTL-HD ... 0362 0864 0765
 HUGHES HIRD-E8 .. 0362 0864 0765
 LG LSS-3200A 0362 0864 0765
 LG HTL-HD 0362 0864 0765
 MITSUBISHI SR-HD5 0864
 MITSUBISHI SRHD400 0864
 MITSUBISHI SRHD500 0864
 MOTOROLA HDT100 0463
 PHILIPS DSHD800R 0864
 PIONEER SH-D505 0062
 PROSCAN PSHD105 0265
 RCA HD65W20 0467
 RCA PSHD105 0265
 RCA DTC-100 0265
 RCA DTC-210 0265
 SAMSUNG SIR-T165 0959
 SAMSUNG SIR-T351 0959
 SAMSUNG SIR-TS160 0563
 SAMSUNG SIR-TS360 0563
 SONY SATHD100 0963
 SONY SATHD200 0963
 SONY SATHD300 0963
 SYLVANIA 6900DTD 0759
 TOSHIBA DST3000 0362 0765
 TOSHIBA DST3100 0362 0765
 TOSHIBA DW65X91 0362 0765
 ZENITH HDSAT420 0065
 ZENITH HDSAT520 0065
 ZENITH DTV1080 0065

VCR

ACCELE 0037
 ADMIRAL 0224
 ADVENTURA 0726
 AIKO 0826
 AIWA 0126 0324 0528 0726
 AKAI 0324 0524 0424 0624
 0724 0027 0931 0335
 ALLEGRO 0326 0534 0925
 AMERICAN HIGH 0830
 APEX 0596
 ASHA 0037
 AT&T 0938
 AUDIO DYNAMICS 0239 0339 0025
 AUDIOVOX 0126
 BELL & HOWELL 0428
 BEAUMARK 0037
 BROKSONIC ... 0227 0626 0327 0632
 0041 0398 0325 0530
 CALIX 0126
 CANDLE 0625 0126 0037
 0025 0825 0026
 CANNON 0124 0830 0535
 CAPEHART 0534
 CARVER 0330
 CCE 0826 0237
 CINEVISION 0126
 CITIZEN 0625 0126 0826
 0037 0025 0825 0026

COLORTYME 0025
 COLT 0237
 CRAIG 0126 0037 0237 0426
 CURTIS MATHES 0124 0330 0324
 0035 0037 0437 0025 0526 0830
 CYBERNEX 0037
 DAEWOO 0529 0625 0626 0826
 0035 0825 0026 0726 0798
 DBX 0239 0339 0025
 DIAMOND VISION 0291
 DIMENSIA 0124
 DURABRAND 0126
 DYNATECH 0324 0726
 ELECTROHOME 0126 0027
 ELECTROPHONIC 0126
 EMERSON 0626 0126 0826 0227
 0327 0630 0632 0134 0037
 0625 0924 0324 0128 0228
 0428 0528 0447 0247 0724 0325
 0526 0726 0027 0527 0827 0927
 0628 0530 0830 0731 0634 0735
 FISHER 0032 0428 0328 0330
 0025 0426 0928 0029
 FUJI 0524 0830
 FUNAI 0324 0247 0447 0726
 GARRARD 0726
 GE 0124 0732 0135
 0835 0037 0429 0830
 GOLDSTAR 0324 0126 0435
 0534 0236 0025
 GRADIENTE 0726
 GO-VIDEO 0037 0139 0342
 0244 0147 0798 0438
 HARLEY DAVIDSON 0726
 HARMAN KARDON 0025 0027
 HARWOOD 0237
 HEADQUARTER 0428
 HITACHI .0538 0324 0336 0931 0834
 HI-Q 0426
 INFINITY 0430
 INSIGNIA 0126
 INSTANT REPLAY 0324 0830
 INTEQ 0126
 JC PENNEY 0124 0126 0428
 0037 0538 0239 0339
 0830 0931 0834 0935 0025
 JCL 0830
 JENSEN 0538 0931
 JVC 0239 0339 0428 0326
 0443 0691 0025 0931
 KENWOOD 0428 0239
 0339 0025 0931
 KLH 0237
 KODAK 0126 0830
 LG 0324 0534 0435 0392
 LITEON 1508
 LLOYD 0324 0726
 LOGIK 0237
 LXI 0324 0126
 MAGNAVOX 0330 0430 0534
 0324 0224 0124 0247
 0230 0125 0093 0598 0830
 MAGNIN 0037
 MARANTZ 0330 0428 0239 0339
 0530 0830 0535 0025

MARTA 0126
 MATSUSHITA 0830
 MEDION 029
 MEI 0830
 MEMOREX 0330 0126 0426
 0032 0632 0534 0037 0226
 0324 0335 0426 0726 0830
 MGA 0630 0027
 MGN TECHNOLOGY 0037
 MIDLAND 0426
 MINOLTA 0538 0830
 MITSUBISHI 0630 0431 0530
 0239 0339 0131 0027
 MONTGOMERY WARD ... 0224 0630
 MOTOROLA 0224 0830
 MTC 0324 0037 0726
 MULTITECH 0324 0037
 0726 0429 0237
 NEC 0428 0239 0339 0530
 0731 0831 0931 0025 0526
 NEXXTECH 0334 0546 0596
 NIKKO 0126
 NOBLEX 0037
 OLYMPUS 0830
 OPTIMUS 0525 0037 0937 0126
 0737 0039 0739 0226
 OPTONICA 0037 0630
 ORION 0227 0630
 PANASONIC 0937 0739 0037
 0938 0124 0345 0830
 PENTAX 0538 0025 0830
 PHILCO 0330 0124 0125 0830
 PHILIPS 0330 0430 0036 0130
 0738 0439 0939 0247 0230 0830
 PHILIPS-MAGNAVOX 0330
 0430 0226
 PILOT 0126
 PIONEER 0132 0538 0237
 0339 1010 0930
 POLAROID 0596
 PORTLAND 0825 0026
 PROSCAN 0124 0430
 PROTEC 0237
 PULSAR 0530
 QUARTER 0426
 QUARTZ 0426
 QUASAR 0937 0037
 0124 0739 0830
 RADIO SHACK 0124 0224 0326
 0525 0126 0428 0830
 0037 0737 0937 0426 0726
 0027 0029 0830 0631 0330
 RADIX 0126
 RANDEX 0126
 RCA 0124 0126 0432 0530
 0732 0832 0932 0030
 0133 0233 0135 0835 0037
 0538 0424 0429 0830 0830
 REALISTIC 0124 0224 0326
 0126 0428 0037 0737 0937 0426
 0726 0027 0029 0830 0631 0330
 REPLAYTV 0930
 RICOH 0930
 RIO 0126 0140

COLORTYME 0025
 COLT 0237
 CRAIG 0126 0037 0237 0426
 CURTIS MATHES 0124 0330 0324
 0035 0037 0437 0025 0526 0830
 CYBERNEX 0037
 DAEWOO 0529 0625 0626 0826
 0035 0825 0026 0726 0798
 DBX 0239 0339 0025
 DIAMOND VISION 0291
 DIMENSIA 0124
 DURABRAND 0126
 DYNATECH 0324 0726
 ELECTROHOME 0126 0027
 ELECTROPHONIC 0126
 EMERSON 0626 0126 0826 0227
 0327 0630 0632 0134 0037
 0625 0924 0324 0128 0228
 0428 0528 0447 0247 0724 0325
 0526 0726 0027 0527 0827 0927
 0628 0530 0830 0731 0634 0735
 FISHER 0032 0428 0328 0330
 0025 0426 0928 0029
 FUJI 0524 0830
 FUNAI 0324 0247 0447 0726
 GARRARD 0726
 GE 0124 0732 0135
 0835 0037 0429 0830
 GOLDSTAR 0324 0126 0435
 0534 0236 0025
 GRADIENTE 0726
 GO-VIDEO 0037 0139 0342
 0244 0147 0798 0438
 HARLEY DAVIDSON 0726
 HARMAN KARDON 0025 0027
 HARWOOD 0237
 HEADQUARTER 0428
 HITACHI 0538 0324 0336 0931 0834
 HI-Q 0426
 INFINITY 0430
 INSIGNIA 0126
 INSTANT REPLAY 0324 0830
 INTEQ 0126
 JC PENNEY 0124 0126 0428
 0037 0538 0239 0339
 0830 0931 0834 0935 0025
 JCL 0830
 JENSEN 0538 0931
 JVC 0239 0339 0428 0326
 0443 0691 0025 0931
 KENWOOD 0428 0239
 0339 0025 0931
 KLH 0237
 KODAK 0126 0830
 LG 0324 0534 0435 0392
 LITEON 1508
 LLOYD 0324 0726
 LOGIK 0237
LXI 0324 0126
MAGNAVOX 0330 0430 0534
 0324 0224 0124 0247
 0230 0125 0093 0598 0830
MAGNIN 0037
MARANTZ 0330 0428 0239 0339
 0530 0830 0535 0025

MARTA 0126
 MATSUSHITA 0830
 MEDION 0291
 MEI 0830
 MEMOREX 0330 0126 0428
 0032 0632 0534 0037 0224
 0324 0335 0426 0726 0830
 MGA 0630 0027
 MGN TECHNOLOGY 0037
 MIDLAND 0429
 MINOLTA 0538 0834
 MITSUBISHI 0630 0431 0538
 0239 0339 0131 0027
 MONTGOMERY WARD ... 0224 0631
 MOTOROLA 0224 0830
 MTC 0324 0037 0726
 MULTITECH 0324 0037
 0726 0429 0237
 NEC 0428 0239 0339 0530
 0731 0831 0931 0025 0526
 NEXXTECH 0334 0546 0596
 NIKKO 0126
 NOBLEX 0037
 OLYMPUS 0830
 OPTIMUS 0525 0037 0937 0126
 0737 0039 0739 0224
 OPTONICA 0037 0631
 ORION 0227 0632
 PANASONIC 0937 0739 0039
 0938 0124 0345 0830
 PENTAX 0538 0025 0834
 PHILCO 0330 0124 0125 0830
 PHILIPS 0330 0430 0036 0136
 0738 0439 0939 0247 0230 0830
 PHILIPS-MAGNAVOX 0330
 0430 0224
 PILOT 0126
 PIONEER 0132 0538 0239
 0339 1010 0935
 POLAROID 0596
 PORTLAND 0825 0026
 PROSCAN 0124 0432
 PROTEC 0237
 PULSAR 0534
 QUARTER 0428
 QUARTZ 0428
 QUASAR 0937 0039
 0124 0739 0830
 RADIO SHACK 0124 0224 0324
 0525 0126 0428 0835
 0037 0737 0937 0426 0726
 0027 0029 0830 0631 0335
 RADIX 0126
 RANDEX 0126
 RCA 0124 0126 0432 0532
 0732 0832 0932 0033
 0133 0233 0135 0835 0037
 0538 0424 0429 0830 0834
 REALISTIC 0124 0224 0324
 0126 0428 0037 0737 0937 0426
 0726 0027 0029 0830 0631 0335
 REPLAYTV 0938
 RICOH 0936
 RIO 0126 0142

CD
 ADC 0490
 ADCOM 0767 0073
 AIWA 0967 0372 0885
 AKAI 0173 0375 0684
 AUDIO TECHNICA 0168
 CALIFORNIA AUDIO LABS 0273
 CAPETRONIC 0568
 CARVER 0268 0368 0468 0184
 CASIO 0379
 CENTRIOS 0979
 CITIZEN 0284
 CURTIS MATHES 0379
 DENON 0668
 EMERSON 0767 0968
 FISHER ... 0368 0169 0269 0369 0473
 GENEXXA 0968 0469 0573
 GOLDSTAR 0673
 HARMAN KARDON 0669 0770
 HITACHI 0469
 INKEL 0769
 JC PENNEY 0670 0379
 JVC 0869 0982
 KENWOOD 0569 0969 0170
 0374 0474 0484
 KRELL 0268
 KYOCERA 0490
 LUXMAN 0270 0370 0574 0475
 LXI 0379
 MAGNAVOX 0268 0774 0681
 MARANTZ 0268 0470 0570 0874
 MCS 0670 0379
 MGA 0770
 MISSION 0268
 MITSUBISHI 0770 0870
 NAD 0773 0975
 NAKAMICHI 0970 0071 0784
 NEC 0670
 NEXXTECH 0679 0879 0480
 0580 0584 0087 0787
 NIKKO 0168 0968 0269
 NSM 0268
 ONKYO 0171 0271 0873 0782
 OPTIMUS 0368 0468 0469
 0569 0371 0471 0571
 0671 0076 0376 0776
 PANASONIC 0273 0974
 0675 0683 0887
 PHILIPS 0268 0774 0184
 PIONEER 0469 0771 0871
 0573 0676 0385 0289
 PROTON 0268
 QUASAR 0273
 RADIO SHACK 0468 0571 0272
 0676 0280 0488 0089 0289
 RCA 0767 0368 0971 0973 0676
 0181 0086 0988 0089 0289
 REALISTIC 0767 0368 0568 0968
 0469 0570 0371 0571
 ROTEL 0268
 SAE 0268
 SAMSUNG 0775
 SANSUI 0268 0072 0973 0075
 SANYO ... 0368 0172 0473 0175 0875

CD cont.

SCOTT	0767	0968
SEARS	0569	0570 0379
SHARP	0569	0570
SHERWOOD	0769	0570
	0471	0272 0587
SHURE		0670
SONY	0372	0880 0081 0681
STS		0490
SYLVANIA		0268
SYMPHONIC		0572
TEAC	0269	0570 0571
	0572	0672 0772 0287
TECHNICS	0273	0974 0683 0887
THETA DIGITAL		0774
TOSHIBA		0773
VICTOR		0869
YAMAHA	0168	0872
	0972	0074 0286
ZENITH	0269	0674
	0577	0080 0686

AUDIO

AIWA	0585	0885 0786 0687
APEX		0245
APPLE IPOD		0190
BOSE		0868
CARVER		0184
CENTRIOS	1107	0087
CITIZEN		0284
CRITERION		0446
DENON	0981	0383 0886
DELPHI		0472
FISHER	0083	0783
GOLDSTAR		0278
HARMAN KARDON	0082	0483
IPOD		0090
JVC	0680	0982 0583
KENWOOD	0969	0482 0283
	0484	0884 0588
KOSS		0143
MAGNAVOX	0281	0083 0193 0277
MARANTZ		0470 0084
MINISUBISHI		0389
NAD	0773	0575 0975
NEO		0174
NEXXTECH	1107	0679 0879 0480
	0580	0584 0087 0787
NORCENT		0392
ONKYO	0182	0782 0882 0890
OPTIMUS	0368	0376 0476 0576
	0776	0876 0077 0980
PANASONIC	0780	0682 0183 0983
	0987	0088 0790 0696
PHILIPS		0177 0083
	0983	0084 0184
PIONEER		0385 0288
	0388	0489 0990
RADIO SHACK	0272	0077 0980
	0282	0188 0288 0388
	0488	0189 0489 0589
RCA	0373	0274 0878 0779 0181
	0384	0186 0288 0388 0688 0788
	0888	0189 0489 0589 0546 0191
REALISTIC		0883

RIO		0142
SABA		0091
SAMSUNG		0047
SANYO		0172
SCOTT		0478
SHARP	0768	0070 0582
SHERWOOD	0272	0282 0487 0587
SKYFI		0174
SONY	0933	0479 0579 0180
	0381	0481 0581 0984
	0085	0185 0285 0985 0592
TAO		0174
TEAC	0672	0382 0187 0287 0387
TECHNICS		0780 0682 0183
	0983	0987 0088
TEVION		0446
VENTURER		0176
XM RADIO		0472 0174
YAMAHA	0781	0881 0485 0685
	0785	0286 0386 0486 0586
ZENITH	0269	0674 0576 0577 0178
	0278	0080 0083 0380 0686 0142

CABLE

ABC	0747	0947 0048 0148 0248
ADELPHIA		0852 0752
ALLEGRO		0054 0154
AMERICAST		0354
ANTRONIX		0448 0548
ARCHER	0448	0548 0648 0748
AT&T		0752
BELL SOUTH		0354
CABLETENNA		0448
CABLEVIEW		0448
CABLEVISION		0252
CENTURY		0748
CITIZEN		0748
COGECO		0752
COLOR VOICE		0848 0948
COMCAST		0752
COMTRONICS	0049	0149
CONTEC		0249
DIGITAL MUSIC EXPRESS		0053
EASTERN		0349
EVERQUEST		0049
GARRARD		0748
GC ELECTRONICS		0548
GEMINI		0255 0549
GE		0556
GENERAL INSTRUMENT (GI)		0552 0747 0148 0752 0952
	0453	0654 0754 0053 0048 0947
HAMLIN	0747	0649 0749 0849
HITACHI		0947
ILICO		0252
JASCO		0748
JERROLD	0552	0747 0148 0453
	0947	0048 0653 0254
MAGNAVOX		0150
MEMOREX		0250
MOTOROLA	0552	0148 0952 0453
	0654	0754 0048 0752 0254 0947
MOVIE TIME		0350
NSC		0350
OAK		0249 0550
PACE		0854

PANASONIC	0647	0452
PARAGON		0250 0450
PHILIPS	0748	0549 0150
	0650	0750 0850
PHILIPS-MAGNAVOX	0152	0055
PIONEER	0449	0252 0950 0051
PULSAR		0250
RADIO SHACK	0152	0055 0154
RCA	0647	0748 0352
REALISTIC		0548
REGAL		0849
REGENCY		0349
REMBRANDT		0947
ROGERS		0252
RUNCO		0250
SAMSUNG	0049	0051
SCIENTIFIC ATLANTA	0451	0351
	0252	0155 0852 0248 0251
SHAW		0752
SIGNAL		0049
SIGNATURE		0947
SL MARX		0049
SPRUCER		0647
STANDARD		0551
STARCOM	0747	0453
STARGATE		0049
STAR SIGHT		0352
STAR TRAK		0253
TANDY		0651
TELEVIEW		0049
TEXSCAN		0551
TIME WARNER		0252
TOCOM	0048	0751 0952 0653
TOSHIBA		0250
TV86		0350
UNIKA	0448	0548 0748
UNITED CABLE		0747
UNIVERSAL	0448	0548 0648
	0748	0851 0054
VIDEOWAY		0052
VIEWSTAR	0149	0150 0350 0651
VIDEO TECH		0656
VIDEOTRON		0252
ZENITH	0951	0154 0748
	0250	0753 0853 0953
ZENITH NETWORK		0354

SAT/DTV/WebTV

Where codes are shown like this [###] each one can be used if you have 2 or more of the SAME device.

AMPLICA		0159
BELL EXPRESSVU	0067	0366
	0167	0464
CHANNEL MASTER		0359
	0459	0559
CHAPPARAL		0657 0757
CHEYENNE		0757
DRAKE	0857	0059 0360
DREAMBOX		0663
DIRECTV	0863	0864 0564 0763
	0963	0259 0260 0263 0962
	0664	0065 0265 0465 0765 0866
	0966	0367 0567 0362 0563 0765
DISH NETWORK	[0167]	[0366]
	0464	0862 0067 0460 0560 0660

DISHPRO	0460	0560 0660 0067
DX ANTENNA		0458 0859
ECHOSPHERE		0464
ECHOSTAR	[0167]	[0366]
	0464	0862 0067 0460 0560 0660
EXPRESSVU	0067	0366 0167 0464
FORTECSTAR		0558 0157 0257
	0357	0457 0557
FUJITSU		0760 0860
GE	0265	0566 0365 0863
	0966	0666 0766 0866
GEMINI		0161
GENERAL INSTRUMENT (GI)		0466 0665 0166 0058 0158 0258
	0960	[0364] [0865] [0965] [0066]
GLOBECAST		0057
GO VIDEO		0662
HITACHI	0465	0564 0664
	0864	0765 0362
HUGHES NETWORK	0763	0765
	0362	0659
	[0465]	[0564] [0644] [0864]
JVC		0464 0862
KENWOOD		0461
LUXOR		0561
MAGNAVOX	0259	0862 0565
MACOM		0661
MINISUBISHI	0765	0864 0465
	0564	0664 0362
MOTOROLA		0466 0463
NORSTAT		0761
PACE	0063	0163 0266
PANSAT		0060 1406
PANASONIC	0264	0260 0261
PRIMESTAR		0364 0665
PHILIPS	0259	0862 0763 0564
	0664	0864 0465 0765 0565 0362
PHILIPS-MAGNAVOX		0259
	0862	0565
PIONEER		0062
PROSAT		0957
PROSCAN	0265	0365 0666
	0966	0766 0866
RCA	0265	0566 0365 0863 0467
	0966	0666 0766 0866 0411
REALISTIC		0358 0961
SAMSUNG		0061 0959
	0962	0263 0563
SHARP		0062
SKY NETWORK	0063	0163 0266
SIERRA I II III		0757
SONY	0963	0367 0567 0160 0861
STARCHOICE		0665 0166 0364
STAR SIGHT		0964
STAR TRAK		0462
STS		0458 0658 0758
SUPER GUIDE		0562
SYLVANIA		0759
TOSHIBA	0765	0864 0465 0564
	0664	0362 0858 0064 0164 0764
ULTIMATE TV		0966 0567
UNIDEN		0964 0958 0762
UNITED		0361
VIDEO CIPHER II		0059
WEB TV		0862 0160
ZENITH	0363	0065 0267 0161
	0266	0857 0059 0360 0165

PANASONIC 0647 0452
 PARAGON 0250 0450
 PHILIPS 0748 0549 0150
 0650 0750 0850
 PHILIPS-MAGNAVOX 0152 0055
 PIONEER 0449 0252 0950 0051
 PULSAR 0250
 RADIO SHACK 0152 0055 0154
 RCA 0647 0748 0352
 REALISTIC 0548
 REGAL 0849
 REGENCY 0349
 REMBRANDT 0947
 ROGERS 0252
 RUNCO 0250
 SAMSUNG 0049 0051
 SCIENTIFIC ATLANTA 0451 0351
 0252 0155 0852 0248 0251
 SHAW 0752
 SIGNAL 0049
 SIGNATURE 0947
 SL MARX 0049
 SPRUCER 0647
 STANDARD 0551
 STARCOM 0747 0453
 STARGATE 0049
 STAR SIGHT 0352
 STAR TRAK 0253
 TANDY 0651
 TELEVIEW 0049
 TEXSCAN 0551
 TIME WARNER 0252
 TOCOM 0048 0751 0952 0653
 TOSHIBA 0250
 TV86 0350
 UNIKA 0448 0548 0748
 UNITED CABLE 0747
 UNIVERSAL 0448 0548 0648
 0748 0851 0054
 VIDEOWAY 0052
 VIEWSTAR 0149 0150 0350 0651
 VIDEO TECH 0656
 VIDEOTRON 0252
 ZENITH 0951 0154 0748
 0250 0753 0853 0953
 ZENITH NETWORK 0354

DISHPRO 0460 0560 0660 0067
 DX ANTENNA 0458 0859
 ECHOSPHERE 0464
 ECHOSTAR [0167] [0366]
 0464 0862 0067 0460 0560 0660
 EXPRESSVU 0067 0366 0167 0464
 FORTEC STAR 0558 0157 0257
 0357 0457 0557
 FUJITSU 0760 0860
 GE 0265 0566 0365 0863
 0966 0666 0766 0866
 GEMINI 0161
 GENERAL INSTRUMENT (GI)
 0466 0665 0166 0058 0158 0258
 0960 [0364] [0865] [0965] [0066]
 GLOBECAST 0057
 GO VIDEO 0662
 HITACHI 0465 0564 0664
 0864 0765 0362
 HUGHES NETWORK 0763 0765
 0362 0659
 [0465] [0564] [0644] [0864]
 JVC 0464 0862
 KENWOOD 0461
 LUXOR 0561
 MAGNAVOX 0259 0862 0565
 MACOM 0661
 MITSUBISHI 0765 0864 0465
 0564 0664 0362
 MOTOROLA 0466 0463
 NORSTAT 0761
 PACE 0063 0163 0266
 PANSAT 0060 1406
 PANASONIC 0264 0260 0261
 PRIMESTAR 0364 0665
 PHILIPS 0259 0862 0763 0564
 0664 0864 0465 0765 0565 0362
 PHILIPS-MAGNAVOX 0259
 0862 0565
 PIONEER 0062
 PROSAT 0957
 PROSCAN 0265 0365 0666
 0966 0766 0866
 RCA 0265 0566 0365 0863 0467
 0966 0666 0766 0866 0411
 REALISTIC 0358 0961
 SAMSUNG 0061 0959
 0962 0263 0563
 SHARP 0062
 SKY NETWORK 0063 0163 0266
 SIERRA I II III 0757
 SONY 0963 0367 0567 0160 0861
 STARCHOICE 0665 0166 0364
 STAR SIGHT 0964
 STAR TRAK 0462
 STS 0458 0658 0758
 SUPER GUIDE 0562
 SYLVANIA 0759
 TOSHIBA 0765 0864 0465 0564
 0664 0362 0858 0064 0164 0764
 ULTIMATE TV 0966 0567
 UNIDEN 0964 0958 0762
 UNITED 0361
 VIDEO CIPHER II 0059
 WEB TV 0862 0160
 ZENITH 0363 0065 0267 0161
 0266 0857 0059 0360 0165

DVD

ADVENT 0893
 AFREY 0343
 AIWA 0043
 AKAI 0141 0145
 AMES 0744
 AMW 0393 0493
 ANABA 0797
 APEX 0240 0640 0740 0840
 0044 0644 0245 0545 0146
 0347 0547 0495 0992 0741 0596
 ASPIRE 0994
 A-TREND 0940
 AUDIOVOX 0793
 AXION 0793
 B & K 0499
 BLAUPUNKT 0644
 BODYSONIC 0343
 BOSE 0868
 BOSS 0792
 BROKSONIC 0894 0398 0041
 CENTRIOS 0796 1308 1408
 0793 1007 1107 1507 1607
 1707 1008 1108 1807 0546
 CHANGHONG 0741
 CINEVISION 0142
 CITECH 1908
 CITIZEN 1908
 CLASSIC 0744 1706 0741
 COBY 0294 0296 0396
 0293 0146 0494 0091
 CONCEPT 0644
 CRITERION 0446
 CURTIS INTERNATIONAL 0594
 0494
 CYBERHOME 0940 0100 0595
 CYTRON 0246 0440
 DAEWOO 0645 0745
 0046 0798 0198
 DENON 0641 0743
 DENZEL 0444
 DESAY 0497
 DIAMOND VISION 0496
 0890 0291
 DIGIX 0095
 DIGITREX 0146
 DISNEY 0447
 DUAL 0346 0000 0297 0444 0246
 DURABRAND 0546 0142 0246
 DVD 2000 0841
 ELTA 0045 0145
 EMERSON 0142 0695
 0591 0247 0447
 ESA 0297
 FARENHEIT 0697
 FISHER 0243
 FUNAI 0247 0447
 GE 0542 0644
 GOLDSTAR 0142
 GO-VIDEO 0744 0395 0798 0047
 0891 0791 0342 0244 0147
 GPX 0295 0096
 GRADIENTE 0143
 GREENHILL 0644
 HAAZ 0746 0846
 HAIER 0195
 HARMAN KARDON 0344

HITACHI 0042 0342 0444 0543
 HITEKER 0146
 HUMAX 0892
 ILO 0597 1608
 INFINITY 0343
 INSIGNIA 0142 0247
 0793 0644 0192
 INITIAL 0644 1608
 INTEGRA 0843
 JBL 0344
 JVC 0242 0098 0691
 1808 0443 0993
 JWIN 0640 0990 0191
 KAWASAKI 0196 0546
 KENWOOD 0641 0544
 KISS 0444
 KLH 0644 0292 0240
 KONKA 0642 0742
 0842 0942 0192
 KOSS 0143 0440
 KXD 0091
 LASONIC 0746 0496
 LENOXX 0794 0145
 LG 0142 0898 0392
 LINN 0945
 LITEON .. 0899 0891 0491 0597 1508
 LIQUIDVIDEO 0793
 MAGNAVOX .. 0441 0442 0599 0799
 0699 0247 0193 0093 0598
 MARANTZ 0441 0142
 0442 0943 0799
 MAXENT 0993
 MEDION 0792 0246
 0991 0291 0597
 MEMOREX 0246 1606
 MERIDIAN 0441
 MICROSOFT 0542
 MINTEK 0644
 MITSUBISHI 0841
 MUSTEK 0744
 MYRON & DAVIS 0897
 NAD 0142 0944
 NAKAMICHI 0844
 NESA 0644 0897
 NEXXTECH 0896 0097 0197
 0297 0095 1806 1007 1107
 1207 1307 1907 1008 0546 0596
 NORCENT 0294 0899
 0394 0194 0494
 ONKYO 0843 0199
 OPTIMUS 0042
 ORION 0041
 ORITRON 0143 1607
 PANASONIC 0241 0641 0099
 0698 0345 0696 0340
 PACIFIC 0246
 PHILIPS 0441 0442 0943 0177
 0599 0799 0699 0247 0447 0598
 PHILIPS-MAGNAVOX 0441 0442
 0943 0599 0699
 PIONEER 0941 0042 0299
 0399 0498 0592 1010
 PIVA 1109
 POLAROID 0140 0397 0596
 POLK AUDIO 0441 0442 0799
 PORTLAND 0145
 PROLINE 0143
 PROSCAN 0542 0690

SAT/DTV/WebTV

Where codes are shown like this [###]
 each one can be used if you have 2 or
 more of the SAME device.

AMPLICA 0159
 BELL EXPRESSVU 0067 0366
 0167 0464
 CHANNEL MASTER 0359
 0459 0559
 CHAPPARAL 0657 0757
 CHEYENNE 0757
 DRAKE 0857 0059 0360
 DREAMBOX 0663
 DIRECTV 0863 0864 0564 0763
 0963 0259 0260 0263 0962
 0664 0065 0265 0465 0765 0866
 0966 0367 0567 0362 0563 0765
 DISH NETWORK [0167] [0366]
 0464 0862 0067 0460 0560 0660

PROSONIC	0294
PYLE	0692
RADIO SHACK	0546 0946
.....	0593 0693
RCA	0542 0644 0546
.....	0946 0693 0690
REGENT	0794
REOC	0746
RIO	0142
RJ TECHNOLOGY	1209
ROSEN	0694
ROTEL	0242
SABA	0593
SAMSUNG	0342 0047 0895
.....	0997 0790 0147
SAMPO	0343
SANSUI	0041 0398
SANYO	0092 0243
SEARS	0041 0247
SEG	0444
SELECTRON	1309 1409 1509
.....	1609 1709 1809 1909
SHARP	0341 0391 0492
SHERWOOD	0144
SHINCO	0644
SHINSONIC	0644
SONIC BLUE	0395
SONY	0300 0400 0500
.....	0541 0200 0440
SOUNDSTORM	0692 0792
SUNGALE	0996
SUPERSCAN	0247
SUPERSONIC	0096
SV2000	0247
SYLVANIA	0247 0447
SYMPHONIC	0247 0447 0591
TEAC	0042 0546
TECHNICS	0641
TECHWOOD	0944 1708
TERAPIN	0995
TEVION	0440 0246 0346
.....	0446 0646 0746 0846
THETA DIGITAL	0042
TIVO	0892 0592
TOSHIBA	0041 0441
.....	0998 0094 0999
TREDEX	0795
TRUTECH	1906
UNITED	0546
VENTURER	0546
WHARFEDALE	0845 0343
WHITE WESTINGHOUSE	0447
X-BOX	0542
XENIUS	0440
YAMAHA	0641 0643
.....	0599 0699 0442
YAMAKAWA	0445 0444 1407
ZENITH	0142 0392

Laser Disc

DENON	0132
PIONEER	0132
PROSCAN	0432
RCA	0432
SANYO	0824
SONY	0933
ZENITH	0824

DVR

Where codes are shown like this [###] each one can be used if you have 2 or more of the SAME device.

AT&T	0938
HUGHES	0659
HUMAX	0892
PANASONIC	0938 0340
PHILIPS	[0738] [0036] [0136]
PIONEER	0592 0399
RCA	0542
REPLAYTV	0938
SONIC BLUE	0938
SONY	0838 0367 0537
TiVo	0738 0838 0036 0136
.....	0367 0999 0892 0592
TOSHIBA	0999

DVD-Recorders + RW

Where codes are shown like this [###] each one can be used if you have 2 or more of the SAME device.

APEX	0495
ASPIRE	0994
BROKSONIC	0398
CENTRIOS	0796 1607 1707
COBY	0091
CYBERHOME	0595
EMERSON	0591
GO-VIDEO	0744 0891 0791
HITACHI	0543
HUMAX	0892
ILO	0597
JVC	0691 1808
KXD	0091
LG	0392
LITEON	0891 0491 0597
MAGNAVOX	[0599] [0699]
MEDION	0991 0597
MEMOREX	1606
MUSTEK	0744
ORITRON	1607
PANASONIC	0340
PHILIPS	[0599] [0699]
PHILIPS-MAGNAVOX	[0599] [0699]
PIONEER	0399 0592 1010
POLAROID	0140
RCA	0542
SAMSUNG	0790
SANYO	0092
SELECTRON	1609
SHARP	0391
SONY	[0300] [0400] [0500]
SYMPHONIC	0591
TRUTECH	1906
TOSHIBA	0998 0441
YAMAHA	[0599] [0699]
ZENITH	0392

Home Automation

GE HOMEMINDER	0201
HOME AUTOMATION	0401
X10 (NEC)	0501

Combo Devices

For Combo Devices, in many cases a single code operates both parts of the device (e.g. the TV and the VCR).

In other cases you need to set up two codes. For example, one for the TV

and one for the VCR. Where codes are shown below as [### ###] the first code operates

the first part of the device's name, and the second code operates the second part. E.G., for a TV/

VCR device, the first code operates the TV and the second code operates the VCR.

TV/VCR Combos

Where the code is listed as [### ###] the first is for the TV and the second is for the VCR. Otherwise just the one code operates both the TV and the VCR.

Unidades Combinadas de TV/VCR
Donde el código aparece como [### ###] el primer código es para el Televisor y el segundo es para el VCR. De otra manera el mismo código controla la TV y el VCR.

ADMIRAL	0224
AIWA	0324 0528
AKAI	0027
BROKSONIC	0632
.....	[0316 0626] [0316 0327]
CURTIS MATHES	0437
DAEWOO	[0505 0826]
.....	[0415 0529]
DIAMOND VISION	[0810 0291]
DURABRAND	[0916 0126]
ELECTROHOME	0027
EMERSON	0324 0924 0027 0028
....	0128 0228 0632 0134 [0505 0826]
.....	[0316 0626] [0316 0327]
FISHER	0428
FUNAI	0324
GE	0835
GOLDSTAR	0324 0435
HITACHI	0324
JVC	0326
INFINITY	0430
LG	0324 0435
LXI	0324
MAGNAVOX	0224 0430 0247
MEMOREX	0428 0632
MITSUBISHI	0027
PANASONIC	0039 0739
PHILIPS	0430 0247
PHILIPS-MAGNAVOX	0224 0430
OPTIMUS	0039 0739
QUASAR	0039 0739
RADIO SHACK	0324 0835
RCA	0835
REALISTIC	0324
SAMSUNG	0437 0895
SANSUI	0632
SANYO	0428
SHARP	0224 0228

SONY	0639
SYLVANIA	0324
SYMPHONIC	0324
TOSHIBA	0627 0437
WHITE WESTINGHOUSE	0324
.....	[0415 0529]
ZENITH	0224 0324 0326 0228
.....	0430 0632 0435 0437
[0505 0826] [0916 0126] [0415 0529]	

TV/DVD Combos

Where the code is listed as [### ###] the first is for the TV and the second is for the DVD. Otherwise just the one code operates both the TV and the DVD.

Unidades Combinadas de TV/DVD
Donde el código aparece como [### ###] el primer código es para el Televisor y el segundo es para el DVD. De otra manera el mismo código controla la TV y el DVD.

ADVENT	0893
APEX	[0023 0741]
AXION	[0319 0793]
BROKSONIC	0041
CHANGHONG	[0023 0741]
CLASSIC	[0023 0741]
DAEWOO	[0615 0046]
DIAMOND VISION	[0622 0496]
.....	[0810 0291]
DURABRAND	[0916 0142]
EMERSON	0247
FUNAI	0247
GPX	0096
HAIER	0195
ILO	1608
INITIAL	1608
INSIGNIA	0247 [0504 0192]
JVC	0993
KAWASAKI	0196
KONKA	0842 0942
LASONIC	[0622 0496]
LIQUIDVIDEO	[0319 0793]
MAGNAVOX	0247
MEMOREX	0041
NEXXTECH	1806
PANASONIC	0345 0696
PHILIPS	0247 [0520 0447]
PIVA	1109

SAMSUNG	0895
SANSUI	0041
SEARS	0041
SUPERSONIC	0096
SYLVANIA	0247
SYMPHONIC	0247
TOSHIBA	0041 0094

DIAMOND VISION	0291
DURABRAND	[0142 0126]
EMERSON	0247 [0447 0324]
FISHER	[0243 0328]
FUNAI	0247 [0447 0324]
GO-VIDEO	0342 0244 0147 0798
HITACHI	[0543 0324]
INSIGNIA	[0142 0126]
JVC	0443 0691
LG	0392
LITEON	1508
MAGNAVOX	0247
.....	[0093 0230] [0598 0230]
MEDION	0291
NEXXTECH ..	0596 1907 [0546 0334]
PANASONIC	0345
PHILIPS	0247 [0598 0230]
PIONEER	1010
POLAROID	0596
RCA	[0542 0124]
RIO	0142 0126
SAMSUNG	0147 0997
SANSUI	0041 0398
SANYO	[0243 0328]
SEARS	0041
SONY	0540
SYLVANIA	0247
.....	[0447 0324] [0447 0225]
SYMPHONIC	0247
.....	[0447 0324] [0591 0225]
TECHWOOD	1708
TOSHIBA	0094 0441
WHITE WESTINGHOUSE
.....	[0447 0324]
ZENITH	[0142 0126]

TV/VCR/DVD Combos

Where the code is listed as [### ###] the first is for the TV and the second is for the VCR/DVD. Otherwise just the one code operates both the TV and the VCR/DVD.

Unidades Combinadas de TV/DVD
Donde el código aparece como [### ###] el primer código es para el Televisor y el segundo es para el VCR/DVD. De otra manera el mismo código controla la TV y el VCR/DVD.

BROKSONIC	0894
DIAMOND VISION	[0810 0291]
MAGNAVOX	0247
PANASONIC	0345
PHILIPS	0247
SAMSUNG	0895
SEARS	0247
SUPERSCAN	0247
SYLVANIA	0247
TOSHIBA	0094

DVD/VCR Combos

Where the code is listed as [### ###] the first is for the DVD and the second is for the VCR. Otherwise just the one code operates both the DVD and the VCR.

Unidades Combinadas de DVD/VCR
Donde el código aparece como [### ###] el primer código es para el DVD y el segundo es para el VCR. De otra manera el mismo código controla el DVD y el VCR.

APEX	0596
BROKSONIC	0041 0398
CINEVISION	[0142 0126]
DAEWOO	0798

DVR/SAT Combos

BELL EXPRESSVU	0366 0167
DISH NETWORK	0167 0366
DREAMBOX	0663
ECHOSTAR	0167 0366
EXPRESSVU	0366 0167
FORTEC STAR	0558 0157 0257
HUGHES NETWORK	0763 0659
RCA	0966
PHILIPS	0763
PROSCAN	0966
SAMSUNG	0959
SONY	0367 0567
ULTIMATE TV	0966 0567
ZENITH	0267

DVR/CABLE Combos

CABLEVISION	0252
ILLICO	0252
PIONEER	0252
ROGERS	0252
SCIENTIFIC ATLANTA	0252
TIME WARNER	0252
VIDEOTRON	0252

DVR/DVD Combos

HUMAX	0892
ILO	0597
JVC	1808
LITEON	0597
MEDION	0597
PANASONIC	0340
PIONEER	0592 0399
TIVO	0892 0592
TOSHIBA	0999 0998

HTIB (Home Theater in a Box)

Where the code is listed as [### ###] the first is for the DVD and the second is for the AUDIO. Otherwise just the one code operates both the DVD and the AUDIO.

Unidades Combinadas de HTIB (Teatro en casa en una caja)
Donde el código aparece como [### ###] el primer código es para el DVD y el segundo es para el AUDIO. De otra manera el mismo código controla el DVD y el AUDIO.

AIWA	[0043 0585]
AMW	0493
APEX	0245
BOSE	0868
CENTRIOS	1308 1107 0546
CLASSIC	1706
CRITERION	0446
DURABRAND	0546 0142
EMERSON	0695
INSIGNIA	1208
JVC	0098
KLH	0292
KOSS	0143

LENOXX	0794
LG	0898
MAGNAVOX	0193
.....	[0598 0277] [0442 0277]
MYRON & DAVIS	0897
NESA	0897
NEXXTECH	1208 1107 0546
NORCENT	0494
ONKYO	0199
PANASONIC	0099
PHILIPS	0177 [0598 0277]
PIONEER	0299 0498
RADIO SHACK	0546 0091 0191
.....	[0946 0589]
RCA	0546 0693 [0946 0589]
REGENT	0794
RIO	[0142 0380]
SABA	0593
SAMSUNG	0047 0895
SELECTRON	1409 1909
SONY	0200
TECHWOOD	1708
TEVION	0446
ZENITH	[0142 0380]